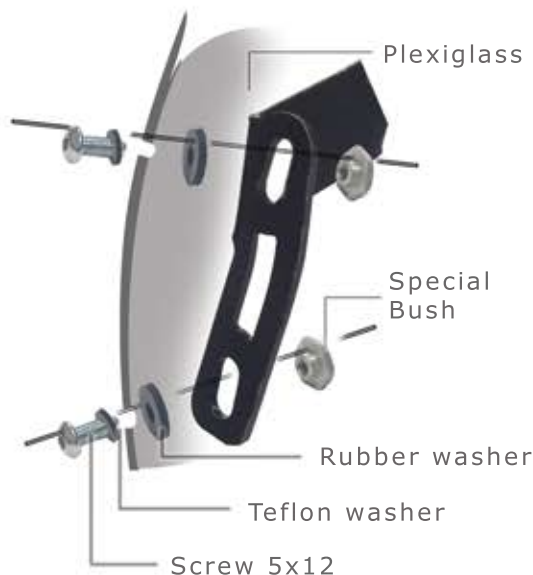


MOUNTING PROCEDURE**KIT WINDSHIELD
DUCATI DIAVEL****DD1300**WWW.BARRACUDAMOTO.COM**STEP 1**

FIX THE WINDSHIELD/SCREEN ON THE BRACKET: FIX THE SPECIAL BUSH ON THE REAR SIDE OF BRACKET; PUT THE RUBBER WASHER BETWEEN THE PLEXIGLASS AND THE BRACKET; LOCK THE WINDSHIELD/SCREEN WITH THE 5X12 SCREWS USING THE TEFLON WASHER BETWEEN THE HEAD OF SCREW AND PLEXIGLASS.

**KIT**


X4. THICKNESS H 10
X4. SCREW TB 8X40
X2. BRACKET
X4. SPECIAL BUSH
X4. RUBBER WASHER
X4. SCREW 5X12
X4. WASHER DIAMETER 5 IN TEFLON
X1. WINDSHIELD / SCREEN

STEP 2

LEFT SIDE INSTALLATION METHOD EXAMPLE

**STEP 3**


FIX THE WINDSHIELD ON THE MOTORBIKE: REMOVE THE FIXING SCREW OF HANDLEBAR PUT THE ALUMINIUM THICKNESS INTO THE HANDLEBAR SCREW LOCATION. APPLY THE BRACKET WITH THE WINDSHIELD/SCREEN FIXED BEFORE USING THE 8X40 SCREWS

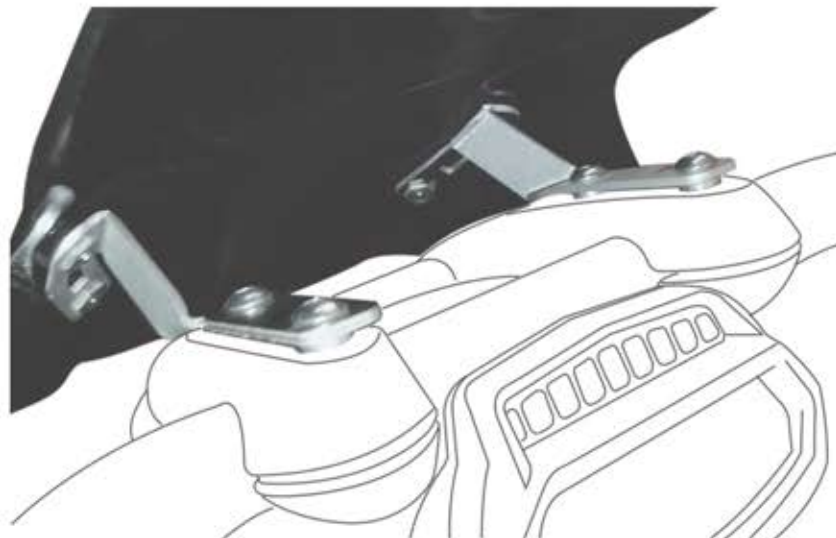


FIX THE WINDSHIELD/SCREEN ON THE BRACKET LIKE SHOWN IN THE PICTURE . REMOVE THE HANDLEBAR SCREW FIXING; INSERT THE H10 THICKNESS INTO THE LOCATION OF SCREW JUST REMOVED; APPROACH THE WINDSHIELD/SCREEN WITH THE BRACKET FIXED BEFORE ON THE THICKNESS USING THE 8X40 SCREWS FIND INTO THE INSTALLATION KIT. ADJUST THE INCLINATION OF HANDLEBAR AND LOCK THE BRACKET TO THE MOTORBIKE

ISTRUZIONI DI MONTAGGIO**KIT CUPOLINO
DUCATI DIAVEL****DD1300**WWW.BARRACUDAMOTO.COM**STEP 1****MONTAGGIO DEL CUPOLINO SULLE STAFFE:**

MONTARE LA BOCCOLA SPECIALE SULLA PARTE POSTERIORE DELLA STAFFA; PORRE LA RONDELLA DI GOMMA TRA IL PLEXIGLASS E LA STAFFA; AVVITARE IL CUPOLINO CON LE BRUGOLE 5X12 USANDO LE RONDELLE IN TEFLON TRA LA TESTA DELLA VITE E IL PLEXIGLASS.

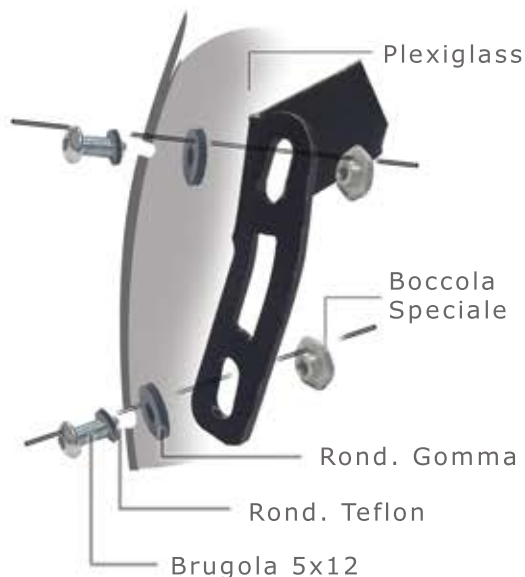**STEP 3****MONTAGGIO DEL CUPOLINO SULLA MOTO**

RIMUOVERE LE BRUGOLE DI FISSAGGIO DEL MANUBRIO. PORRE GLI SPESSORI IN ALLUMINIO NELLE SEDI DI FISSAGGIO DELLE BRUGOLE DEL MANUBRIO. APPLICARE LE STAFFE CON IL CUPOLINO MONTATO IN PRECEDENZA UTILIZZANDO LE BRUGOLE 8X40 PRESENTI NEL KIT.

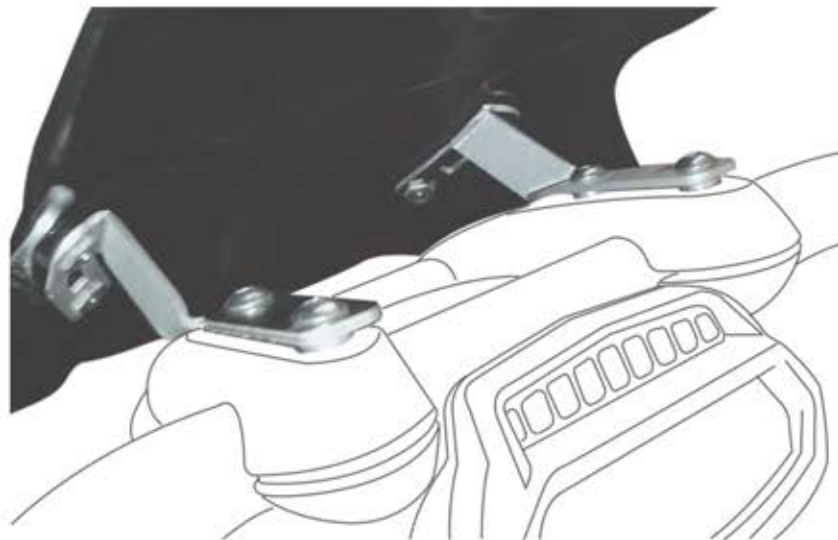

MONTARE IL CUPOLINO SULLE STAFFE COME IN FIGURA 1. RIMUOVERE LE BRUGOLE DI FISSAGGIO DEL MANUBRIO. INSERIRE GLI SPESSORINI H10 FORNITI NEL KIT NELLE SEDI DELLE BRUGOLE APPENA RIMOSSE; ACCOSTARE IL CUPOLINO CON LE STAFFE MONTARE IN PRECEDENZA SOPRA GLI SPESSORI, UTILIZZARE LE BRUGOLE 8X40 FORNITE NEL KIT PER IL FISSAGGIO. REGOLARE L'INCLINAZIONE DEL MANUBRIO E SERRARE BENE LE STAFFE ALLA MOT

KIT

X4. SPESSORI H 10 LETT.
X4. BRUGOLA TB 8X40
X1. COPPIE STAFFE
X4. BOCCOLA SPECIALE
X4. RONDELLE IN GOMMA
X4. BRUGOLA 5X12
X4. RONDELLE Ø 5 TEFLON
X1. CUPOLINO

STEP 2

ESEMPIO DI INSTALLAZIONE LATO SINISTRO

