

## MOUNTING PROCEDURE


KIT SAVE CARTER  
HONDA CBR 600 RR '07 - '12

**HP6101-07-RR**

## KIT

- X2. HEAD SAVE CARTER
- X2. SAVE CARTER BASE
- X1. THICKNESS 45 MM
- X2. THICKNESS 7,5 MM
- X1. THICKNESS 55 MM
- X2. BRACKETS 8 MM
- X1. BOLT 10X80
- X1. BOLT 10X90
- X2. NUT Ø 10

WWW.BARRACUDAMOTO.COM

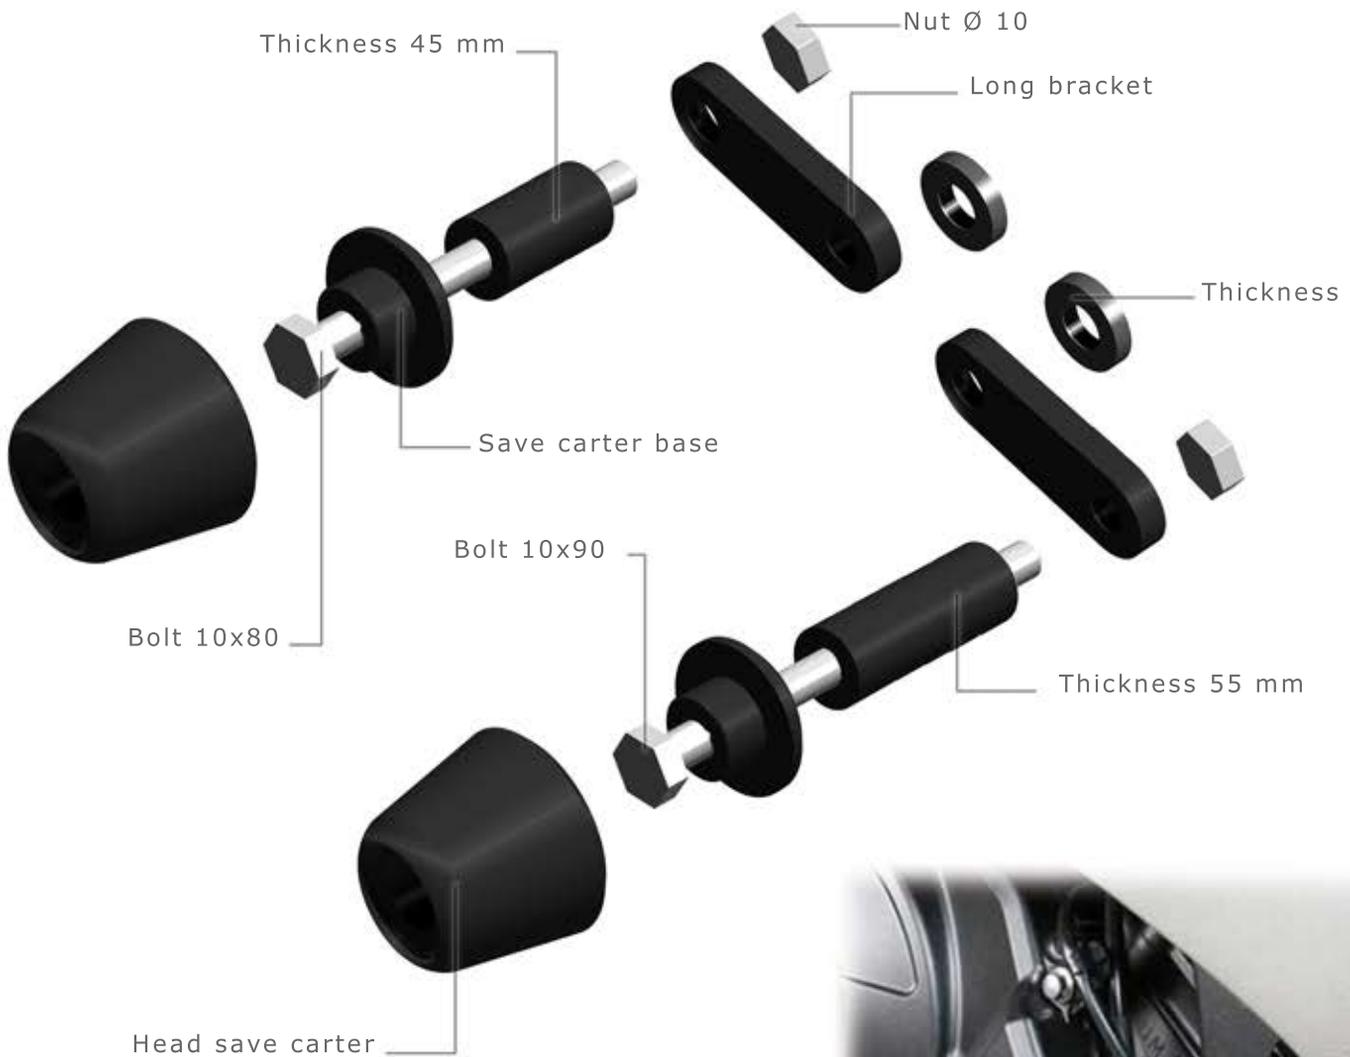

FIX POINT ON BIKE



BEFORE BEGINNING THE ASSEMBLING PROCEDURE, LOCATE THE MOUNTING POINTS ON THE BIKE, USE THE SHIMS AND BOLTS AS DESCRIBED IN IMAGE IN ORDER TO GET THE RIGHT PROJECTION OF THE BUFFER FROM THE BIKE.

FIT THE HEAD IN PVC ONLY AFTER YOU HAVE INSTALLED AND TIGHTENED UP ALL THE KIT.